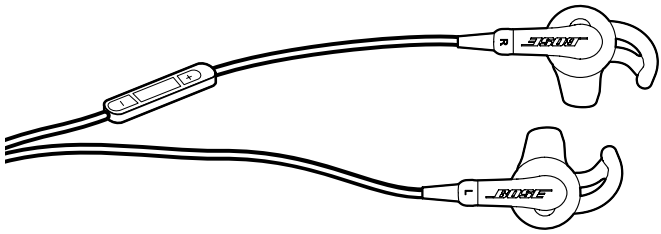

Bose® FreeStyle™

Earbuds

Owner's Guide

Important Safety Information

Please read this owner's guide carefully and save it for future reference.

CAUTIONS

- Sounds that you rely on as reminders or warnings may have an unfamiliar character when using headsets. Be aware of how these sounds may vary in character so you can recognize them as needed.
- Do not drop, sit on, or allow the headset to be immersed in water.

WARNINGS

- Contains small parts which may be a choking hazard. Not suitable for children under age 3.

- This product contains magnetic material. Contact your physician if you have questions on whether this might affect the operation of your implantable medical device..

- Long-term exposure to loud music may cause hearing damage. It is best to avoid high volume levels when using headset, especially for extended periods.
- Use caution when using your headset while operating a vehicle or engaging in any activity that requires your full attention. Check and follow local laws regarding headset use. Some jurisdictions impose specific limitations, such as single earpiece configuration, on the use of such products while driving.

Limited Warranty

Your Bose® headphones are covered by a limited warranty. Details of the limited warranty are provided on the product registration card that is included in the carton. Please refer to the card for instructions on how to register. Failure to register will not affect your limited warranty rights.

CE This product conforms to all applicable EU Directive requirements. The complete Declaration of Conformity can be found at www.Bose.com/compliance.

©2014 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Names and Contents of Toxic or Hazardous Substances or Elements						
	Toxic or Hazardous Substances and Elements					
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)
Metal parts	X	0	0	0	0	0
Plastic parts	0	0	0	0	0	0
Speakers	X	0	0	0	0	0
Cables	X	0	0	0	0	0
O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006.						
X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006.						

iPad, iPhone, iPod, iPod classic, iPod nano, iPod shuffle and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

Contents

Welcome 5
Carton contents 5
Connecting to your iPhone, iPod, or iPad 6
Using the earbuds with your iPhone, iPod, or iPad 6
- For use with 6
- Earbud controls 6
- Basic functions 7
- Media playback functions 7

Importance of proper fit 8
- Fitting the headphones to your ear 8
- Changing eartips 9

Adjusting for comfort and stability 9
- Using the adjustment slider 9
- Using the clothing clip 9

Troubleshooting 10
Cleaning 11

Please complete and retain for your records:

The serial and model number can be found on the warranty card.

Serial number _____

Model number _____

Purchase date _____

We suggest you keep your receipt with this owner's guide.

Welcome

Thank you for purchasing the Bose® FreeStyle™ earbuds for use with select iPhone, iPod and iPad models. The Bose FreeStyle earbuds offers a combination of lifelike audio performance and comfortable fit not available from most conventional headsets.

Carton contents

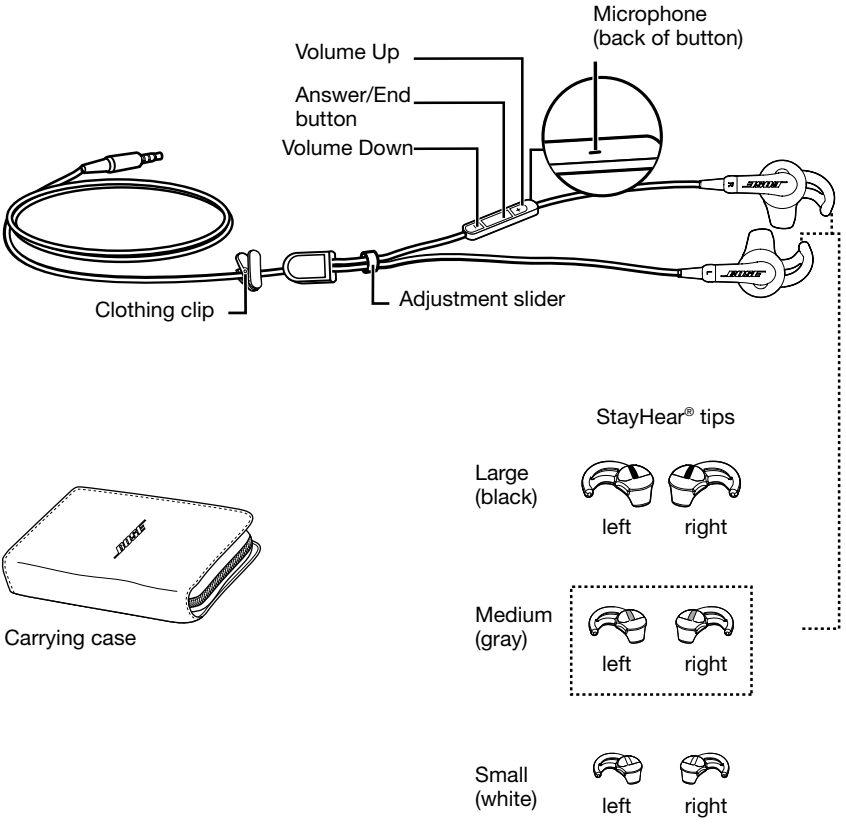

Note: *The earbuds comes with medium StayHear® tips attached.*

Connecting to your iPhone, iPod, or iPad

You can connect the earbuds to the standard 3.5 mm headphone jack on your iPhone, iPod, or iPad.

Using the earbuds with your iPhone, iPod, or iPad

The Bose® FreeStyle™ earbuds include a small in-line remote with an integrated microphone and easy to access Answer/End and volume control buttons.

For use with

The remote and mic are supported only by iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (120GB, 160GB), and iPod nano (4th generation or later). The remote is supported by iPod shuffle (3rd generation or later). Audio is supported by all iPad and iPod models.

Note: Full controls may not be available for some iPhone, iPod, or iPad models.

Note: For information on using your earbuds with other devices, refer to http://global.Bose.com

Earbud controls

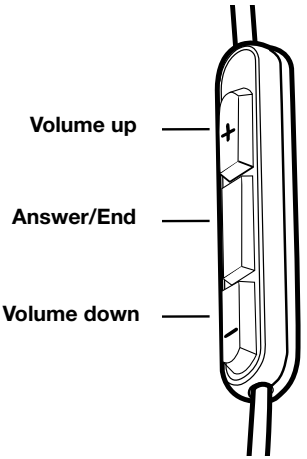

Basic functions

Increase volume	Press and release the + button.
Decrease volume	Press and release the – button.
Answer a call	When you receive an incoming call, press and release the Answer/End button to answer.
End a call	Press and release the Answer/End button.
Decline an incoming call	Press and hold the Answer/End button for about two seconds, then release.
Switch to an incoming or on-hold call and put the current call on hold	While on a call, press and release the Answer/End button once. Press and release again to switch back to the first call.
Switch to an incoming or on-hold call and end the current call	While on a call, press and hold the Answer/End button for about two seconds, then release.
Use Voice Control	Press and hold the Answer/End button. *See iPhone User Guide for compatibility and usage information about this feature.*

Media playback functions

Play or pause a song or video	Press and release the Answer/End button.
Skip to the next song or chapter	Press and release the Answer/End button twice quickly.
Fast forward	Press and release the Answer/End button twice quickly and hold the second press.
Go to the previous song or chapter	Press and release the Answer/End button three times quickly.
Rewind	Press and release the Answer/End button three times quickly and hold the third press.

Importance of proper fit

When you wear the earbuds properly, they provide the comfort and clarity you expect from Bose.

Fitting the headphones to your ear

The headphone earpiece has a soft StayHear® tip attached, allowing it to rest comfortably in the bowl of your ear. The wing part of the tip fits just under your ear ridge.

Note: *Each tip is marked with a either an L or an R to indicate which earpiece it is for. Be sure to attach the left StayHear® tip to the left earpiece and the right StayHear® tip to the right earpiece.*

To determine if the tip is the right size:

1. Insert the earpiece into the canal just enough for the headphone to rest lightly against your ear.
2. Tilt the headphone back and press the tip wing under the ear ridge until it is secure.

   The tips should fit comfortably yet securely in the bowl of the ear.

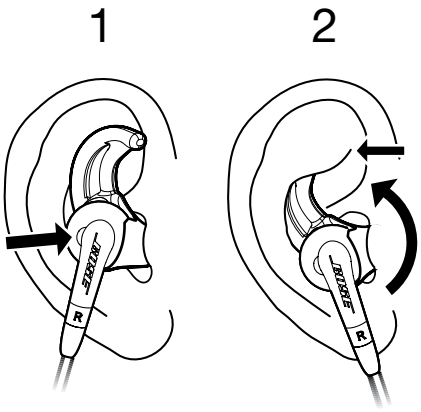

Changing eartips

Select the type and size of eartip that provides you with the best comfort and fit.

1. Gently peel the edges of the attached tip away from the earpiece, using care not to tear the tip.

CAUTION: *To prevent damage, do not pull on the StayHear® tip wing.*

2. Position the opening of the new tip over the nozzle and the small slot over the nozzle hook.

Note: *Each tip is marked with a either an L or an R to indicate which earpiece it is for. Be sure to attach the left StayHear® tip to the left earpiece and the right StayHear® tip to the right earpiece.*

3. Ease the base of the tip down around the base of the earpiece until the tip feels secured.

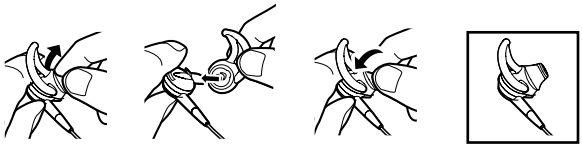

Adjusting for comfort and stability

There are several ways you can adjust your earbuds to provide additional comfort and stability. Using the adjustment slider and clothing clip you can customize how you wear your earbuds.

Using the adjustment slider

Move the adjustment slider up or down to reduce or increase the amount of loose cord between the left and right earpiece. Finding the right position for the slider can help optimize the placement of the Answer/End button and integrated microphone.

Using the clothing clip

Use the clothing clip to fasten the cable to your clothing, for convenience, stability, and to help manage the cable. This can be helpful during high-movement activities or when using the earbuds in a single earpiece configuration.

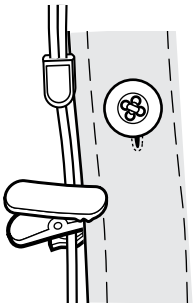

Troubleshooting

If you experience any trouble using your earbuds, try the following troubleshooting instructions. If you still need help, contact Bose customer support.

Problem	What to do
No audio/Intermittent	• Make sure that the headphone plug is securely connected to the headphone jack. • Try another audio device.
Excessive bass	• Turn off any audio enhancement features on the audio source.
Microphone is not picking up sound	• Make sure that the headphone plug is securely connected to the headphone jack. • Make sure the microphone is not being blocked or covered. *The microphone is located on the back of the Answer/End button. (You may notice the small opening for the microphone.)*
Phone not responding to button presses	• Make sure that the headphone plug is securely connected to the headphone jack. • For multi-press functions: Vary speed of presses.
iPhone, iPod or iPad not responding to remote	• Full controls may not be available for some iPhone, iPod and iPad models.
Eartips falling off	• Make sure the eartips are securely attached to the earpiece and nozzle hook.
Lost eartip	• Visit owners.Bose.com for replacement tips.
Sound is muffled from earpiece	• Make sure eartips and earbud nozzles are clear of any debris or wax build-up. • Unplug the earbuds from the audio source, then plug back in making sure they are securely connected. • Try another audio device.

Cleaning

Your earbuds may require periodic cleaning:

Eartips: First, remove them from the earbuds and wash the tips with a mild detergent and water. Make sure you thoroughly rinse and dry them before putting them back on the earbuds.

Earbud nozzles, microphone, Answer/End, volume buttons: Clean only with a dry, soft cotton swab or equivalent. Never insert any cleaning tool into the nozzle or microphone opening.

Better sound through research®

©2014 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM714522 Rev. 00